



CODELOCKS UK HEADQUARTERS

Tel: +44 (0) 1635 239645
Fax: +44 (0) 1635 239644
sales@codelocks.com
www.codelocks.com

Helpline, service & spares
Freephone: 0800 393 405

CODELOCKS INC US

Tel: +1 714 979 2900
Fax: +1 714 979 2902
sales@codelocks.us
www.codelocks.us


Helpline, service & spares
Toll free: 1.877.codelock

CODELOCKS (Australia) PTY LTD

Tel: +61 2 9882 1009
Fax: +61 2 9882 6030
sales@codelocks.com.au
www.codelocks.com.au

Helpline, service & spares
Toll free: 1800 052 131

FL_FireKit_v1:0418
© 2018 Codelocks Ltd. All rights reserved.

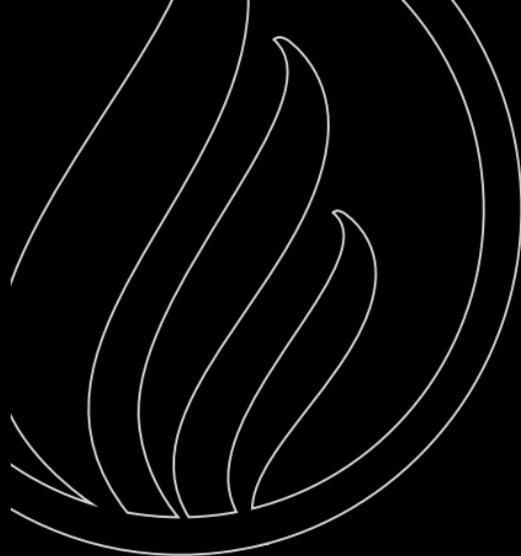

Fitting Instructions

FIRE KIT





New lock installations

1. Prepare door as per the installation instructions and template.
2. Increase depth of rebate for latch and strike plates by 1mm to accommodate intumescent strips A & B.
3. Where necessary, increase size of spindle hole and cable hole to 25mm to accommodate intumescent strips C & D.
4. Remove backing from intumescent strips. Stick strip A to back of strike plate, and 2 of strips B to back of latch faceplate, choose the correct width to suit the latch.
5. For electronic locks, roll strip C into a cylinder and stick into cable hole.
6. Roll 2 strips D into a cylinder and stick 1 either side of door in spindle hole.
7. Cut 2 or 3 intumescent tubes E to suit your door thickness. Insert into top and bottom fixing holes.
8. Continue to install lock as per installation instructions.

Existing lock installations

1. Remove lock, latch and strike plate from door and frame.
2. Proceed as new lock installation instructions from step 1. 'Increase depth of rebate'.
3. Intumescent strips C & D can be cut to shorter lengths, if they can be accommodated in existing size holes without interfering with the operation of the lock.
4. Proceed with new lock installation instructions from step 3.

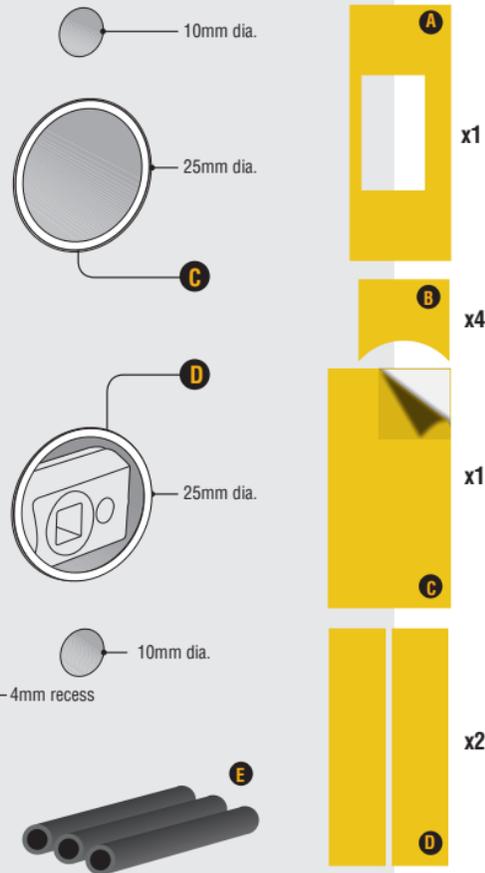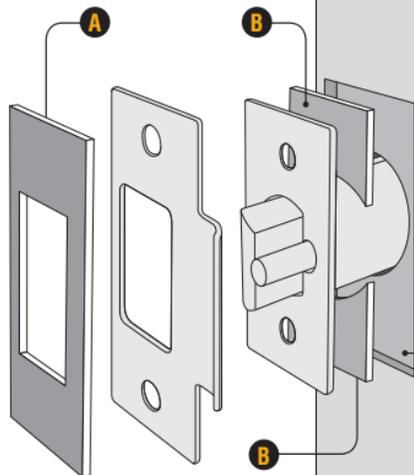

30 mins

60 mins